



www.probbax.com  
info@probbax.com

# Instructions / Installation / Instalación / Installazione / Installatie / Montage Anleitung






## Wall-mounted Bin WM-3021 / WM-3041

WM-3041

WM-3021

1


Screw mounting

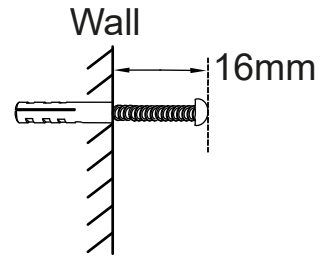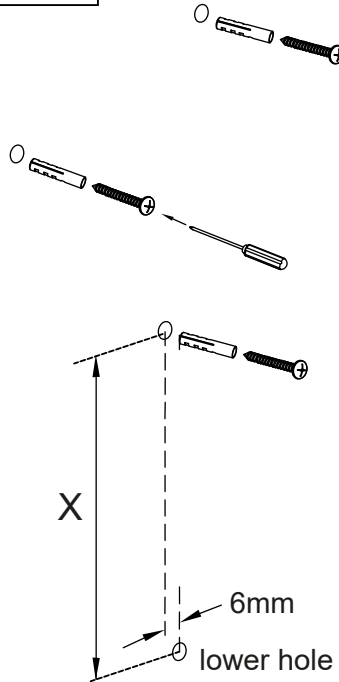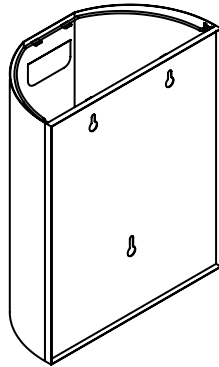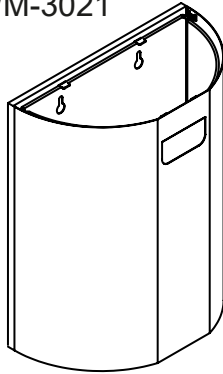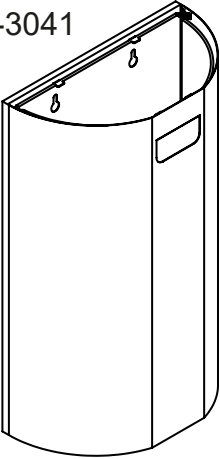

Note:  
screws should stick out  
of the wall by 16mm

WM-3021, X=140mm  
WM-3041, X=306mm


Accessories

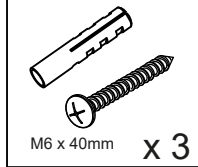

M6 x 40mm x 3


2

Wall-mounting

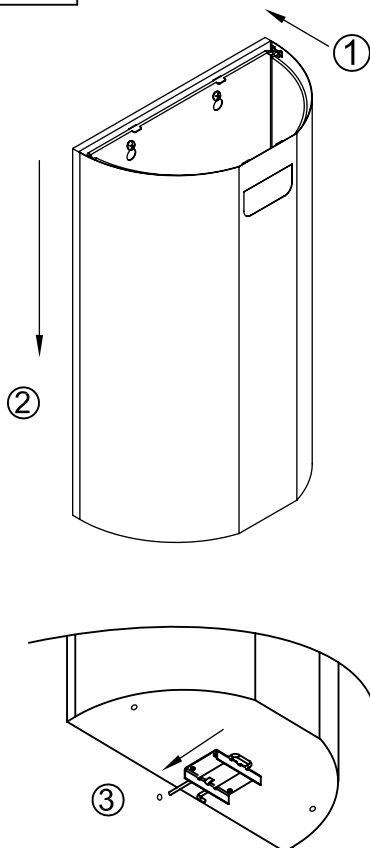

3

Liner positioning

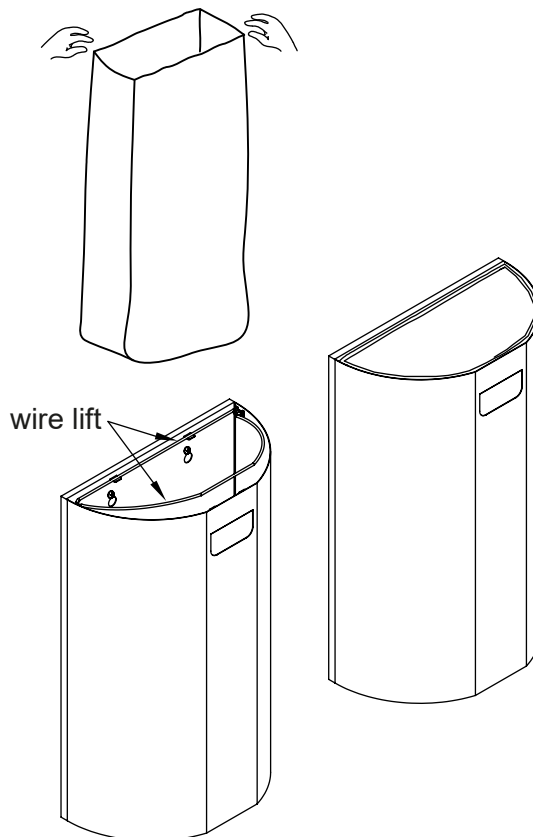

4

Emptying

